


MOUNTING DRILL TEMPLATE

For general wall mounting, use the outer two locations.

The inner 2 locations can be used for additional support or for mounting to a narrow post.

Post mounting will require an additional bracket or support above the unit to prevent tilting or lifting.

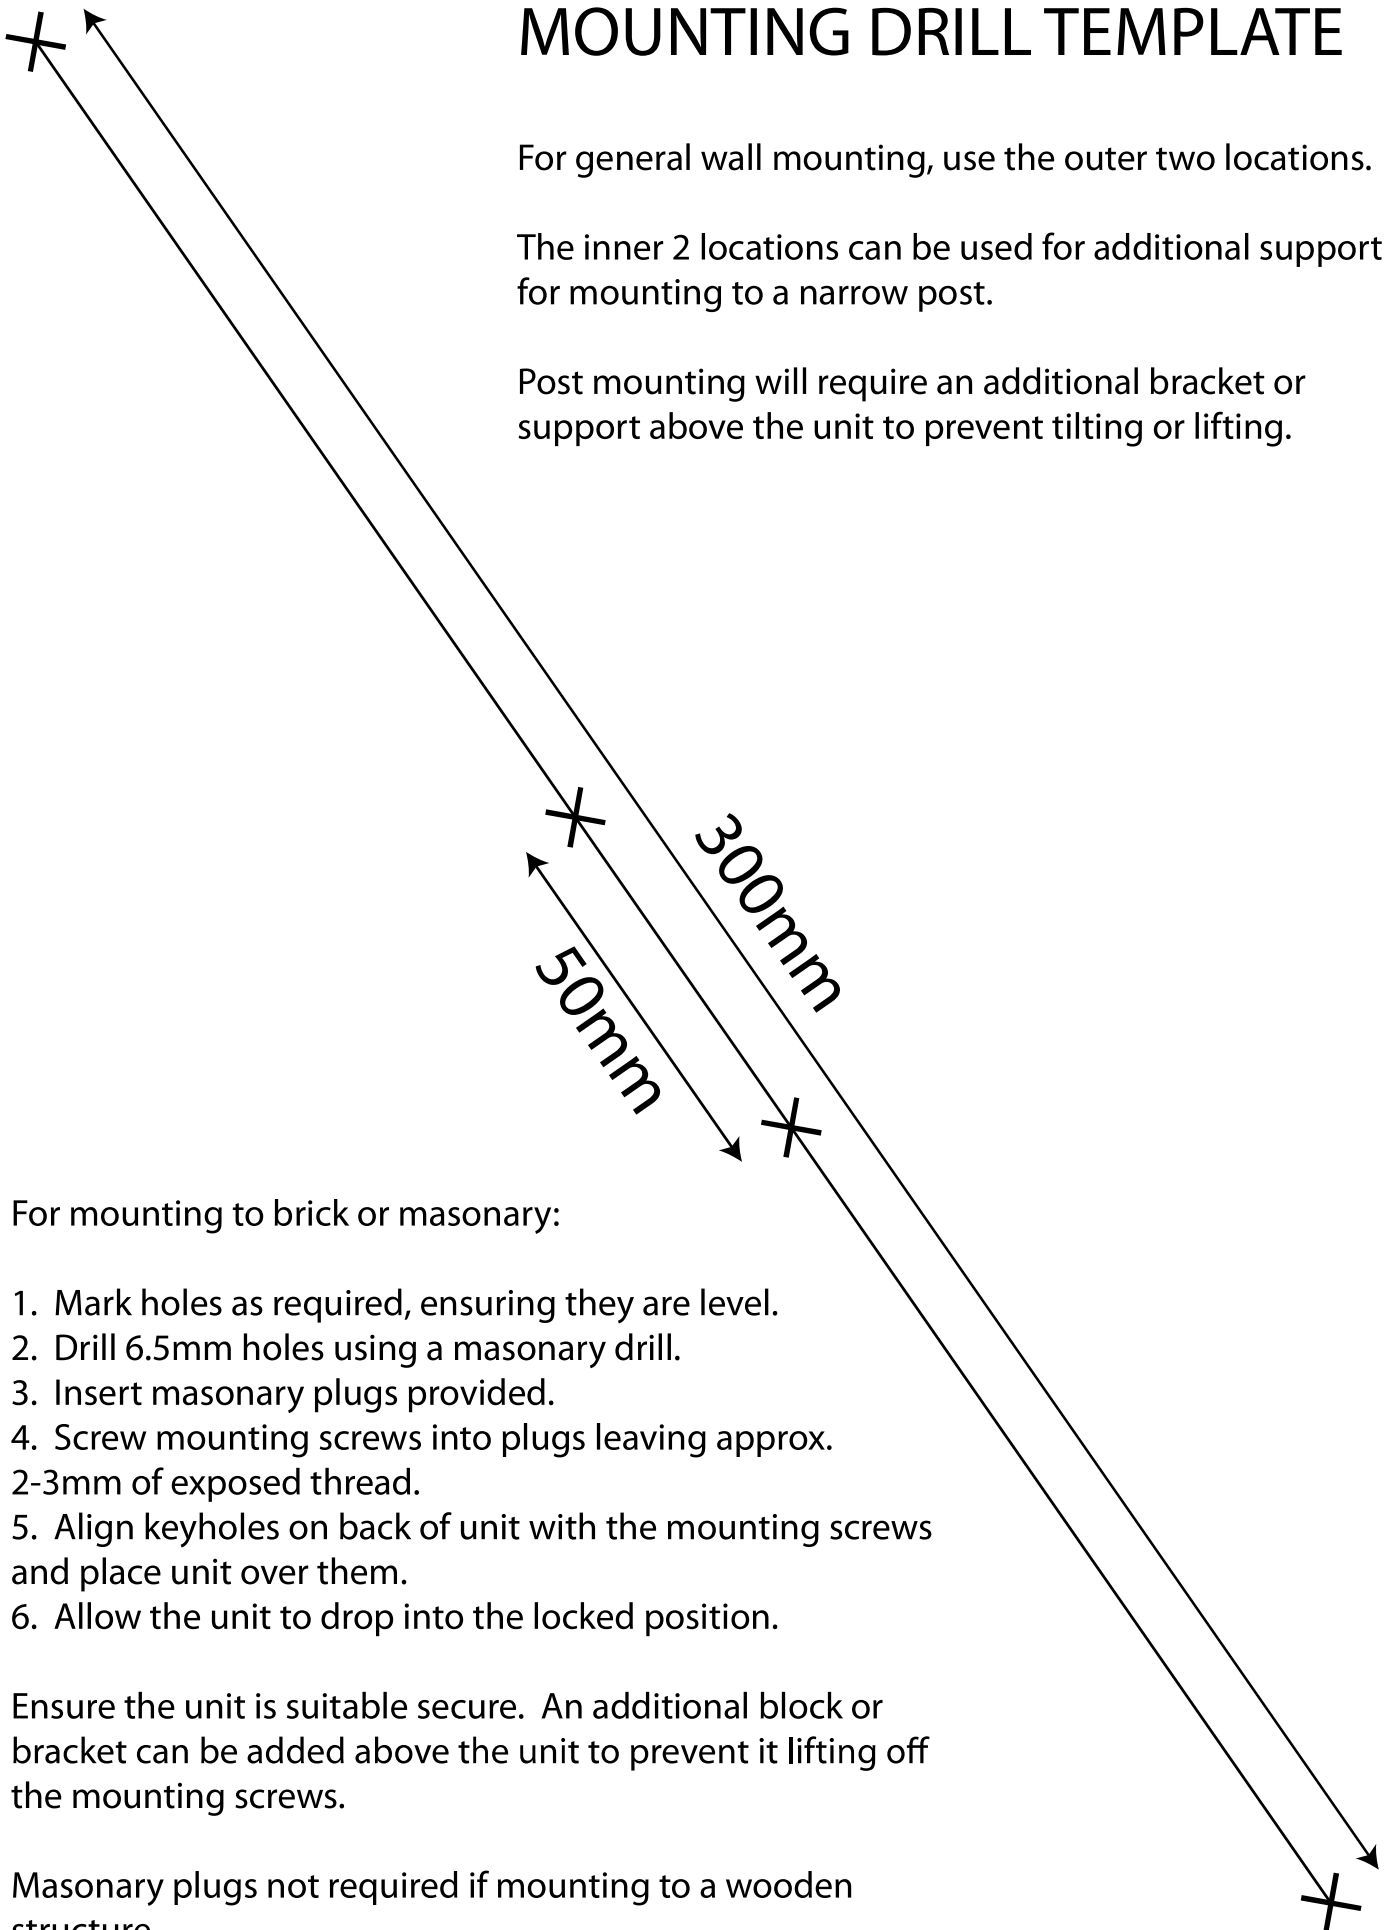

For mounting to brick or masonry:

1. Mark holes as required, ensuring they are level.
2. Drill 6.5mm holes using a masonry drill.
3. Insert masonry plugs provided.
4. Screw mounting screws into plugs leaving approx. 2-3mm of exposed thread.
5. Align keyholes on back of unit with the mounting screws and place unit over them.
6. Allow the unit to drop into the locked position.

Ensure the unit is suitable secure. An additional block or bracket can be added above the unit to prevent it lifting off the mounting screws.

Masonry plugs not required if mounting to a wooden structure.